


Reconfiguring Standard 21-Chord Autoharp for Folk Music


Reconfigure Eb for E Major*. Move to right end.

Move remaining chord bars to the left.

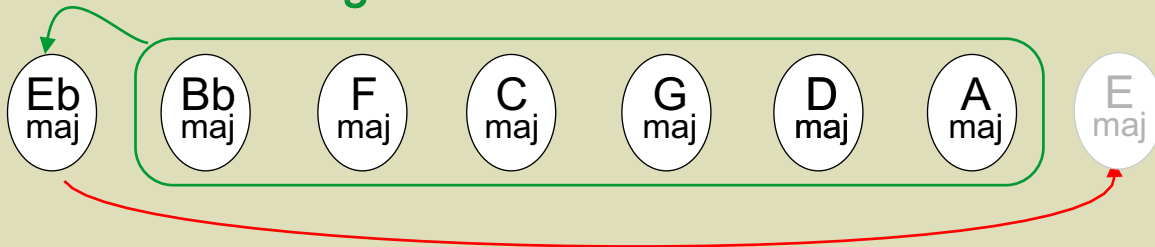


Reconfigure F7 for F#7. Move to right end.

Move remaining chord bars to the left.

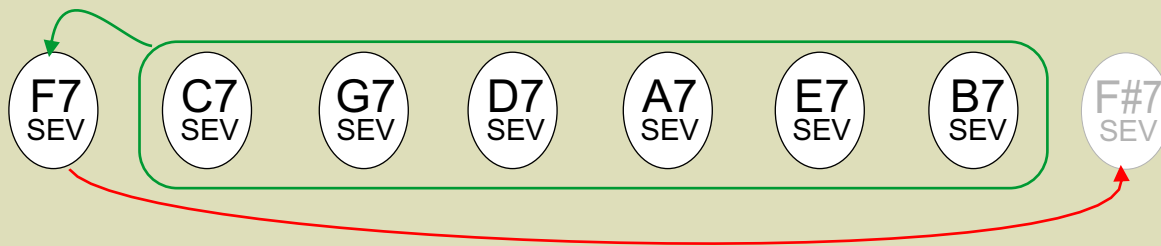

Reconfigure Ab, Bb7, and Cm to Bm*, F#m*, and C#m.
Move to right end.

Move remaining chord bars to the left.

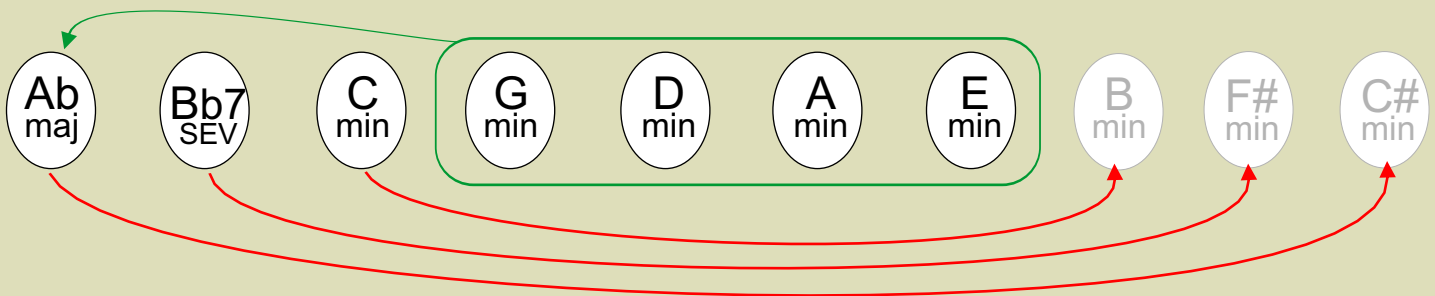

*If you have an Oscar Schmidt 21-Chorder and you would rather buy than cut, Elderly Music sells pre-configured chord bars for E major, Bm, and F#m. They also sell blank chord bars, in case you would rather cut your F#7 and C#m out of new ones.

Do NOT disassemble your autoharp over shag carpet!